



DISCONNECTING THE ARCHOS FROM A COMPUTER

Once all your file transfers are finished, close Windows® Explorer and any other program that may have read or written to the ARCHOS. Click on the 'safely remove' icon in the system tray, next to the clock.

Before removing the cable, you will notice the state of the battery charge. If the icon has three solid bars, this means the battery is completely charged. If they are blinking, it means the battery is still charging. You can leave the device to fully charge or unplug the cable and use the ARCHOS with a partial charge.



PHOTO PLAYBACK




Opening the photo browser will allow you to view the stored photos one by one or as an automatic slide show. Highlight the desired photo file, then press Play/Pause to view it. Press the Next and Previous buttons to view the next or previous photo. Press the Play/Pause button to start a slide show. Press Play/Pause again to stop the slide show. The speed of the slideshow can be adjusted through the settings.

FM RADIO

To use the radio, you must have the headphones plugged in as this acts as your antenna. You can create radio presets, scan for stations, or record what is currently playing by pressing and holding the Back button and making your selection.

CHARGING & CONNECTING TO A COMPUTER

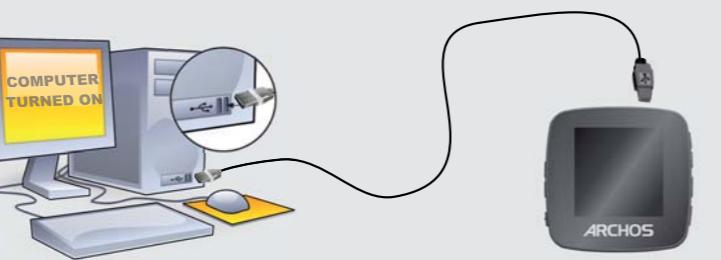


Charging: Whenever your ARCHOS is connected to a running computer, it will charge automatically (even if you unmount it with the safe removal icon -- see below).

Connecting: When you connect the USB cable to your computer, the ARCHOS will connect as an external hard drive. Windows® Explorer will show it as ARCHOS (E:) for example. For Macintosh® computers, it will also appear as an external hard drive.

VIDEO PLAYBACK

The video player requires that your video file be of a specific format in order to be able to play. A converter application for Windows® computers is available in the folder 'Software' on the ARCHOS that can be installed on your computer. It will convert most video files into the specifically required format. Convert your video files to a resolution of 128 x 128 with your computer using this software before copying them to the ARCHOS.

MUSIC SELECTION

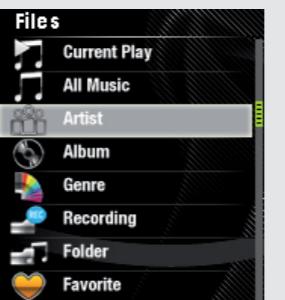

Opening the music browser will allow you to choose your music by the title, artist, album, or genre (so long as the music files have these tag information in them). If a song has no music tags, then you can find it in the folder named <Other>.

If a lyrics file (text file of type .LRC) is found in the same folder and has the same name as the song playing, the song lyrics will be shown while the song plays.

USER SETTINGS



By going to the main menu's SETTINGS screen, you can personalize how you want your ARCHOS to operate.

Music: Allows you to decide if you want your music to repeat, to play in shuffle mode or not, and what equalizer adjustments you want.

FM Radio: Allows you to switch between mono and stereo and select the FM frequency range corresponding to your region.

Slideshow Pause: Allows you to set the length of time between images shown during a slide show.

Display: Allows you to set the **Backlight Time** (how long before the screen goes off or dims), the screen **Brightness** (the screen brightness), and the **Backlight Mode** (determines if the screen goes dim or off - to save battery power).


Sleep Timer: Sets the continuous playing time before the player is turned off automatically.

Language: Allows you to set your interface language.

Note: This device is also capable of displaying simple text (.txt) files!

PUTTING MUSIC AND PHOTOS ONTO YOUR ARCHOS

You can transfer your media files to the ARCHOS either by copy/pasting them into the respective folders using Windows® Explorer (or the Finder on a Macintosh®), or by using Windows Media® Player. The Synchronize button in Windows Media® Player is a one way 'sync' button. It will add music and photo files to your ARCHOS. It will give you the possibility to have the same digital media on your ARCHOS as you have in your Windows Media® Player library.

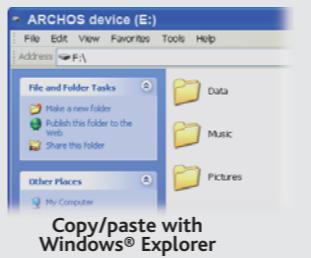

On your computer, start Windows Media® Player. 1) Select the **Sync** tab. 2) Drag the media files you want to transfer into the sync area in the panel on the right. 3) Click on the **Start Sync** button. The selected songs or photos will be copied directly into the corresponding **Music** or **Pictures** folder of the ARCHOS. See your Windows Media® Player help instructions for more information. To receive and play podcasts, you can use freely available software from the Internet such as the popular Juice program to get your podcasts and then you can transfer them to your ARCHOS.

MUSIC PLAYBACK



1. Audio Frequency Graph
(or song lyrics if the folder contains a .lrc file with same name as the song)

2. Elapsed time

3. Play/pause Status

4. Song duration

5. Song title & artist name

6. Equalizer setting

7. Song item out of total number of songs on the device/folder

TROUBLESHOOTING

PROBLEM: The music file is not visible in the library or cannot play when I select it in the file browser.

SOLUTION: Make sure you put all your music in the folder named 'Music.' Not all music formats are readable. The ARCHOS can play MP3, WMA, WAV, FLAC, and APE file types. If it is an M4A type file (typically from Macintosh® computers), it will need to be converted to one of the above formats before being able to play.

PROBLEM: The device is frozen and doesn't respond to pressing on the buttons.

SOLUTION: Turn off the device by holding the Play/Pause button for 3 seconds (or slide the ON/OFF switch to the OFF position) and then restart as normal.

PROBLEM: I would like to charge my device with the PC but listen to it at the same time.

SOLUTION: By 'removing safely' the device as explained above, but not unplugging the USB cable, you can use your ARCHOS product while it charges. This charge and listen function is not possible with Windows Vista® and Windows® 7 computers.

PROBLEM: I added new music to my ARCHOS but it does not show up in the Music browser.

SOLUTION: You must place your files in the **Music** folder on the ARCHOS. If it does not have music tags, it will be listed under <Other>. Select **Update Library** (bottom item on list) which will update the Library with all the latest added music.

PROBLEM: I cannot see a file that I just copied to my ARCHOS.

SOLUTION: Remember that when you are browsing in the Music or Photo folders, the files that are not of those types will not be visible - even though they are there. Use the **Files** browser to see all your files.

REGISTER YOUR PRODUCT!

Once you unpack your ARCHOS product, we recommend that you take a few minutes to register it (www.archos.com/register). This will allow you to get access to our technical support.

On our Website: See the Frequently Asked Questions section on www.archos.com/faq

Technical Support Team: Visit www.archos.com/support for e-mail support. U.S. & Canada: Call 877-300-8879

Europe: please register your product before contacting Technical Support.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture. Use of this product is for personal use only. Copying CDs or loading music, video, or picture files for sale or other business purposes is or may be a violation of copyright law. Copyrighted materials, works of art, and/or presentations may require authorization to be fully or partially recorded. Please be aware of all such applicable laws concerning the recording and use of such for your country and jurisdiction. For driving safety, only a passenger should operate the device when the car is in motion and not the driver. Laws governing the usage of electronic device by the driver may be applicable in your jurisdiction and/or country.

LEGAL AND SAFETY INFORMATION

Warranty and Limited Liability

This product is sold with a limited warranty and specific remedies are available to the original purchaser in the event the product fails to conform to the limited warranty. Manufacturer's liability may be further limited in accordance with its sales contract. In general, and in non-limited manner, the manufacturer shall not be responsible for product damages caused by natural disasters, fire, static discharge, misuse, abuse, neglect, improper handling or installation, unauthorized repair, alteration or accident. In no event shall the manufacturer be liable for loss of data stored on disk media. MANUFACTURER SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. EVEN IF INFORMED OF THE POSSIBILITY THEREOF IN ADVANCE.

ARCHOS licensor(s) makes no warranties, express or implied, including, without limitation, the implied warranties of merchantability and fitness for a particular purpose, regarding the licensed materials. ARCHOS' licensor(s) does not warrant, guarantee or make any representations regarding the use or the results of the use of the licensed materials in terms of its correctness, accuracy, reliability, correctness or otherwise. The entire risk as to the results and performance of the licensed materials is assumed by you. The exclusion of implied warranties is not permitted by some jurisdictions. The above exclusion may not apply to you.

In no event will ARCHOS' licensor(s), and their directors, officers, employees or agents (collectively ARCHOS' licensor) be liable to you for any consequential, incidental or indirect damages (including damages for loss of business profits, business interruption, loss of business information, and the like) arising out of the use of inability to use the licensed materials even if ARCHOS' licensor has been advised of the possibility of such damages. Because some jurisdiction do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitations may not apply to you. Please see your sales contract for a complete statement of warranty rights, remedies and limitation of liability. Furthermore, warranty does not apply to:

1. Damages or problems resulting from misuse, abuse, accident, alteration or incorrect electrical current or voltage.
2. Any product tampered with or damaged by unauthorized repair, alteration or accident.
3. Any product without a warranty or serial number label.
4. Batteries and any consumable items delivered with or in the equipment.

The end user is required to use this product only in conformity with its original purpose and is strictly forbidden to make any technical modifications that could potentially impinge on rights of third parties. Any modification to the hardware, software, or physical enclosure of the product must be approved in writing by ARCHOS. Non approved modified products are subject to the withdrawal of any or all warranty clauses.

As part of the contractual agreement of its products, ARCHOS is committed to ensure the availability of parts and components that are essential to the use and proper working conditions of its products. This availability will be guaranteed for a period of two years, as of the first retail release for customers.

Lithium-Ion Battery Caution

This product is equipped with a Lithium-Ion battery. Do not pierce, open, disassemble it, or use it in a humid and/or corrosive environment. Do not put, store or leave your product in or near sources of heat, in direct strong sunlight, in a high temperature location, in a pressurized container or in a microwave oven. Do not expose it to temperatures over 60 °C (140 °F). If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. Failure to follow these instructions could cause the Lithium-Ion battery to leak acid, become hot, explode or ignite and cause injury or damage.

Only ARCHOS certified technicians are qualified to repair your ARCHOS device. In calling upon non qualified persons to repair your ARCHOS product, you run the risk of damaging your device and voiding your warranty. To prevent risks of electric shock, this unit must only be opened by qualified service personnel.

FCC Compliance Statement

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

USA: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Canada: Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Electrostatic Discharge (ESD)

Normal functioning of the product may be disturbed by ESD. If so, simply shut off the device with the On/Off switch and restart as normal. During file transmission, please handle with care and operate in a static-free environment.

Avoiding Hearing Damage

This product respects the current regulations for limiting the output volume of consumer audio devices to a safe level. By listening to your device with headphones or earbuds at high volumes, you run the risk of permanent damage to your ears. Even if you get used to listening at high volumes and it seems normal to you, you still risk the possibility of damaging your hearing. Reduce the volume of your device to a reasonable level to avoid permanent hearing damage.

If you hear ringing in your ears, reduce the volume or shut off your device. This device has been tested with the ARCHOS supplied earphones. In order to preserve your hearing, it is advised that you use only the following headphone models: the earphones supplied with your ARCHOS device, or any other headphones that respect the current regulations. Other types of headphones may produce higher volume levels.

Environmental Considerations

Protection of the environment is an important concern to ARCHOS. In order to put this concern into tangible actions, ARCHOS has consciously included a set of methods that favor a respect for the environment into the entire cycle of its products. Products of this type contain substances that are potentially dangerous to the environment and to human health. Therefore, you should not dispose of the product in a regular trash. As such, the current European directives ask that this device be collected:

- At places of distribution in the case of a purchase of a similar electronic product.
- At locally created disposal areas (waste disposal centers, sorted trash system, etc.)

By doing this, you are actively participating in the reuse and recycling of disposed electronic and electric equipment that could have potential effects on the environment and human health.

Copyright Notice

Copyright ARCHOS © 2010. All rights reserved. This document may not, in whole or part, be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine-readable form without prior consent, in writing, from ARCHOS. All brands and products names are registered trademarks and the property of their respective owners. Specifications are subject to change without notification. Errors and omissions accepted. Images and illustrations may not always match contents.


Disclaimer of warranty: to the extent allowed by applicable law, representations and warranties of non-infringement of copyrights or other intellectual property rights resulting from the use of the product under conditions other than as here above specified, are hereby excluded.



! * Encienda el dispositivo deslizando el interruptor ON/OFF hacia la posición ON y mantenga pulsado el botón Reproducción/Pausa. Para apagar el dispositivo, mantenga pulsado el botón Reproducción/Pausa (el interruptor ON/OFF no guarda las modificaciones de ajustes).

DESCONEXIÓN DEL ARCHOS DE UN ORDENADOR

Una vez finalizadas todas las transferencias de archivos, cierre el Explorador de Windows® y cualquier otro programa que pueda haber leído o escrito en el ARCHOS. Haga clic en el icono "Quitar hardware con seguridad" de la bandeja del sistema, junto al reloj. Antes de extraer el cable, verá el estado de carga de la batería. Si el icono tiene tres barras sólidas, significa que la batería está completamente cargada. Si parpadean, significa que la batería está aún cargándose. Puede dejar el dispositivo hasta que se cargue por completo, o bien puede desenchufar el cable y utilizar el ARCHOS con carga parcial.

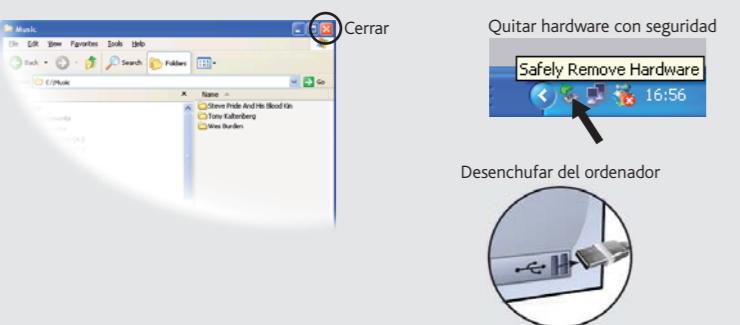

REPRODUCCIÓN DE FOTOS




Si abre el navegador de fotos, podrá ver las fotos almacenadas una por una o como presentación automática de diapositivas. Resalte el archivo de fotografía deseado y pulse Play (Reproducir) para verlo. Pulse los botones Siguiente y Previo para ver la fotografía siguiente o la anterior. Pulse el botón Play/Pause (Reproducir/Pausa) para ver una presentación de diapositivas. Pulse de nuevo el botón Play/Pause (Reproducir/Pausa) para detener la presentación de diapositivas. En la configuración podrá ajustar la velocidad de la presentación de diapositivas.

RADIO FM

Para usar la radio, debe tener los auriculares conectados ya que esto actúa como su antena. Usted puede crear presintonías, buscar las estaciones, o registrar lo que se está reproduciendo manteniendo pulsado el botón Atrás y hacer su selección.

CARGA Y CONEXIÓN A UN ORDENADOR

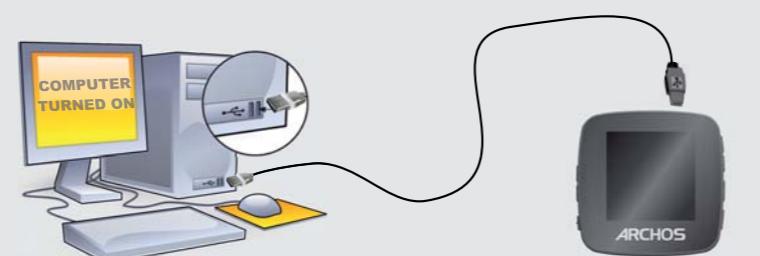

Carga: El dispositivo ARCHOS se cargará automáticamente cuando se conecte a un ordenador que esté encendido (aunque lo desmonte con el icono de extracción segura -- consulte a continuación).

Conexión: Cuando conecte el cable USB al ordenador, el ARCHOS se conectará como disco duro externo. El Explorador de Windows® lo mostrará como ARCHOS (E:) por ejemplo. En ordenadores Macintosh®, aparecerá también como disco duro externo.

REPRODUCIR VÍDEOS

El reproductor de vídeo necesita que su archivo de vídeo esté en un formato específico para poder reproducirlo. Una aplicación de conversión para equipos con Windows® es disponible en la carpeta de 'Software' en el ARCHOS que puede estar instalado en su ordenador. Convierte archivos de vídeo en la mayoría de este requerimiento específico de formato. Convierte sus archivos de vídeo a resolución 128 x 128 con su ordenador, utilizando este software, antes de copiarlos en su ARCHOS.

SELECCIÓN DE MÚSICA



Si abre el navegador de música, podrá elegir la música por título, artista, álbum o género (siempre que los archivos de música dispongan de esta información de etiquetas). Si una canción no tiene ninguna etiqueta de música, podrá localizarla en la carpeta <Other>.

Si hay un archivo de letras de canciones (archivo de texto de tipo .LRC) en la misma carpeta y tiene el mismo nombre que la canción en reproducción, se mostrará la letra de la canción mientras ésta se reproduce.

AJUSTES DEL USUARIO

En la pantalla Configuración del menú principal podrá personalizar el funcionamiento de su ARCHOS.

Música: Le permite decidir si quiere que la música se repita, que se reproduzca en modo aleatorio y qué ajustes de ecualización desea.

FM: le permite cambiar entre mono y estéreo, y definir el rango de frecuencias para su región.

Lectura Auto: Le permite establecer el tiempo que transcurre entre las imágenes durante una presentación de diapositivas.

Exhibir: Le permite ajustar la retroiluminación [Tiempo de Lum] (¿cuánto tiempo antes de que la pantalla se oscurece o se apaga), el brillo [Lum] (el brillo de la pantalla), y el modo de retroiluminación [Modo Lum] (determina si la pantalla se pone oscura o apagado - para ahorrar batería).

Power Off: Ajusta el tiempo de reproducción continua antes de que el reproductor se apague automáticamente.

Idioma: Le permite establecer el idioma de la interfaz.

Nota: ¡Este dispositivo también puede mostrar archivos sencillos de texto (.txt)!

INTRODUCCIÓN DE MÚSICA Y FOTOS EN EL ARCHOS

Es posible transferir archivos multimedia al dispositivo ARCHOS copiándolos y pegándolos en las carpetas correspondientes mediante el Explorador de Windows® (o la función Finder en un Macintosh®), o bien utilizando Windows Media® Player. El botón Sincronizar de Windows Media® Player es un botón de sincronización unidireccional. Añadirá archivos de fotos y música al dispositivo ARCHOS. Le dará la posibilidad de tener los mismos medios digitales en el dispositivo ARCHOS que en la biblioteca de Windows Media® Player.



Copiar/pegar con el Explorador de Windows®


En el ordenador, inicie Windows Media® Player. 1) Seleccione la pestaña Sincronizar. 2) Arrastre los archivos multimedia que deseé transferir hasta el área de sincronización del panel de la derecha. 3) Haga clic en el botón Iniciar sincronización. Las canciones o las fotos seleccionadas se copiarán directamente en la carpeta [Music] o [Pictures] correspondiente del ARCHOS. Consulte las instrucciones de ayuda de Windows Media® Player para obtener más información. Para recibir y reproducir podcasts, puede utilizar software gratuito disponible en Internet (por ejemplo, el popular programa Juice) para obtener los podcasts; a continuación, podrá transferirlos al ARCHOS.

Sincronización con Windows Media® Player 11



REPRODUCCIÓN DE MÚSICA

1. Gráfico de frecuencias de sonido / Portada del álbum (o letras de las canciones si la carpeta contiene un archivo .lrc con el mismo nombre que la canción)

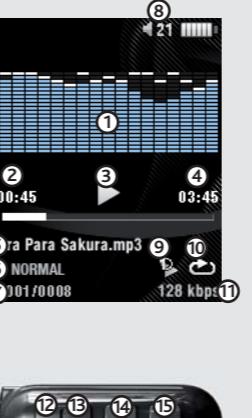

2. Tiempo transcurrido

3. Estado de reproducción/ pausa

4. Duración de la canción

5. Título de la canción

6. Ajustes del ecualizador

7. Canción fuera del número total de canciones del dispositivo

8. Volumen

9. Modo de repetición (Single una vez, Repetir uno, Todo una vez, Repetir todo, Reproducir introducción de la canción)

10. Modo de reproducción (Normal, Aleatorio)

11. Tasa de codificación de bits del archivo

12. Canción anterior (botón deslizante izquierdo)

13. Canción siguiente (botón deslizante derecho)

14. Atrás

15. Reproducción/Pausa

SOLUCIÓN DE PROBLEMAS

PROBLEMA: El archivo de música no se ve en la biblioteca o no se puede reproducir cuando se selecciona en el navegador de archivos.

SOLUCIÓN: Asegúrese de poner toda la música en la carpeta Music. No todos los formatos de música se pueden leer. El ARCHOS puede reproducir archivos de tipo MP3, WMA, WAV, FLAC y APE. Si se trata de un archivo de tipo M4A (normalmente de ordenadores Macintosh®), se deberá convertir a uno de los anteriores formatos para poder reproducirlo.

PROBLEMA: El dispositivo se bloquea y no responde al pulsar los botones.

SOLUCIÓN: Apague el dispositivo manteniendo pulsado el botón Reproducir/Pausa durante 3 segundos (o deslice el interruptor ON/OFF a la posición OFF) y vuelva a encenderlo de forma normal.

PROBLEMA: Me gustaría cargar el dispositivo con el PC mientras escucho música con él.

SOLUCIÓN: Siguiendo el procedimiento de "desconexión segura" del dispositivo explicado anteriormente, pero sin desconectar el cable USB, podrá escuchar su producto ARCHOS mientras se carga. Esta función de carga y escucha no es posible con ordenadores con sistema operativo Windows Vista® y Windows® 7.

PROBLEMA: Se ha añadido música nueva al ARCHOS, pero no aparece en el navegador de música.

SOLUCIÓN: Debe poner los archivos en la carpeta Music del ARCHOS. Si no dispone de etiquetas de música, aparecerá enumerada en <Other>. Seleccione Refrescar (elemento inferior de la lista) para actualizar la biblioteca con la última música añadida.

PROBLEMA: No se ve un archivo que se acaba de copiar en el ARCHOS.

SOLUCIÓN: Recuerde que cuando navegue en las carpetas Music o Pictures, los archivos que no sean de esos tipos no se verán, aunque se encuentren ahí. Utilice el navegador de archivos para ver todos los archivos.

JREGISTRE SU PRODUCTO!

Una vez a su producto ARCHOS, le recomendamos que emplee unos minutos en registrarlo (www.archos.com/register). Esto le permitirá acceder a nuestro servicio técnico.

En nuestra Web : Vea la sección Preguntas Frecuentes en www.archos.com/faq

Contacte con nuestro Equipo de Servicio Técnico: Visite www.archos.com/support para ayuda vía e-mail.

EE.UU y Canadá: Llame al 877-300-8879 (libre de impuestos) Europa: Por favor, registre su producto antes de llamar al Servicio Técnico.

ADVERTENCIA

Para prevenir un incendio o electrocución, no exponga el dispositivo a la lluvia o lo deje en zonas húmedas. Utilice el producto sólo para su uso personal. Copiar CDs o descargar archivos de música, video o foto para su venta u otros propósitos comerciales puede representar una violación de la ley del Copyright. Los materiales registrados, obras de arte y/o presentaciones requieren una autorización para reproducirlos total o parcialmente. Por favor, tenga en cuenta todas las leyes relativas al registro y uso de estas prácticas que sean aplicables en su país y jurisdicción. Para mayor seguridad en la conducción, sólo un pasajero debe manipular el dispositivo mientras el vehículo se encuentre en marcha y no el conductor. Las leyes que regulan el uso de dispositivos electrónicos por el conductor pueden aplicarse en su jurisdicción y/o país.

INFORMACIÓN LEGAL Y DE SEGURIDAD

Garantía y Responsabilidad Limitada

Este producto se vende con una garantía limitada y recursos específicos disponibles para el comprador original en el caso que el producto no cumpla la garantía limitada. La responsabilidad del fabricante puede verse limitada de acuerdo con su contrato de venta. En general, y de acuerdo con la ley del Copyright, los materiales registrados, obras de arte y/o presentaciones requieren una autorización para reproducirlos total o parcialmente. Por favor, tenga en cuenta todas las leyes relativas al registro y uso de estas prácticas que sean aplicables en su país y jurisdicción. En ningún caso, el fabricante se hará responsable por la pérdida de datos almacenados en el disco.

EL FABRICANTE NO SE HARÁ RESPONSABLE DE NINGÚN DANO ESPECIAL, INCIDENTAL O FORTUITO, INCLUSO AUN HABRIENDO SIDO INFORMADO PREVIAMENTE DE LA POSIBILIDAD DE QUE OCURRA.

La(s) licencia(s) ARCHOS no ofrecen(n) ninguna garantía, expresa o implícita, incluyendo, sin limitación, las garantías implícitas de comerciabilidad y adecuación para un propósito en particular, en relación con el producto licenciado. La(s) licencia(s) ARCHOS no autorizan, garantizan ni recuerdan respecto al uso o resultados del uso del producto licenciado en términos de corrección, exactitud, fiabilidad, corrección u otros. La totalidad del riesgo en cuanto a los resultados y el rendimiento del producto bajo licencia, será asumido por usted. La exclusión de garantías implícitas no es permitida por algunas jurisdicciones. La exclusión antes mencionada puede no aplicarse a usted.

En ningún caso el/los licenciario(s) ARCHOS, ni sus directores, funcionarios, empleados o agentes (llamado colectivamente licenciario ARCHOS) será responsable de ningún daño directo o como consecuencia fortuita, incidental o indirecta (incluyendo los daños por pérdida de beneficio, interrupción del negocio, pérdida de información comercial y similares) que surjan de la incapacidad de utilización del producto bajo licencia, incluso si el licenciario ARCHOS ha sido advertido de la posibilidad de tales daños. Debe a que algunas jurisdicciones no permiten la exclusión o limitación de la responsabilidad ante daños fortuitos o incidentales, las limitaciones anteriores pueden no ser aplicadas en su caso.

Por favor, consulte su contrato de venta para conseguir una declaración completa de sus derechos de garantía, reparaciones y limitación de responsabilidad. Además, la garantía no es aplicable a:

1. Daños o problemas derivados del mal uso, abuso, accidente, alteración o corriente eléctrica o voltaje incorrectos.
2. Cualquier producto con el sello de garantía o etiqueta de número de serie manipulado o dañado.
3. Cualquier producto sin garantía o etiqueta de número de serie.
4. Baterías y cualquier otro consumo suministrado con o en el equipo.

El usuario final debe usar este producto sólo en conformidad con su propósito original y está estrictamente prohibido hacer cualquier modificación técnica que pueda afectar a los derechos de terceros. Cualquier modificación en el hardware, software o carcasa del producto debe estar aprobada por escrito por ARCHOS. Los productos modificados sin autorización están sujetos a la retirada de todas o algunas cláusulas de la garantía.

Como parte del acuerdo contractual de sus productos, ARCHOS se compromete a garantizar la disponibilidad de piezas y componentes que son esenciales para el correcto uso y funcionamiento de sus productos. Esta disponibilidad se garantiza por un período de dos años, a partir del lanzamiento de la primera versión comercializada.

Precaución Batería Litio-Ión

Este producto está equipado con una batería de Litio-Ión. No la agujere, abra o desmonte ni la use en entornos húmedos y/o corrosivos. No ponga, guarde o deje su producto en cerca de fuentes de calor, expuesto directamente a la luz solar, en una localización de alta temperatura en un ambiente y aguarde a que se enfrie. No exponga a temperaturas mayores de 60°C. La batería gotea y contacta con su piel, lávase con abundante agua y llame a un centro médico. Si no sigue las instrucciones aquí expresadas, en el caso que el ácido de la batería litio-ión se caliente, explotara o ardiera y causara otras heridas o daños. Sólo los técnicos oficiales de ARCHOS están cualificados para reparar su dispositivo. Ajuste a personas no cualificadas para reparar su producto ARCHOS puede conllevar riesgos para usted y dañar su garantía, así como anular su garantía. Para prevenir riesgos de electrocución, esta unidad únicamente deberá abrirse por personal oficial cualificado.

Declaración de Conformidad de la FCC

Este equipo ha sido probado y cumple con los requisitos de Clase B para un dispositivo digital, en conformidad con la Parte 15 del Reglamento de la FCC (Federal Communications Commission). Estos límites están diseñados para proporcionar una protección razonable ante interferencias perjudiciales en instalaciones domésticas/residenciales. Este equipo genera, utiliza y puede emitir energía de radiofrecuencia y, si no se instala y utiliza conforme a las instrucciones, puede causar interferencias perjudiciales a las comunicaciones por radio. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación particular. Si este equipo causa interferencias perjudiciales para la recepción de radio o televisión, que pueden ser resueltas apagando y encendiendo el equipo, se recomienda al usuario que intente corregir la interferencia siguiendo una o más de las siguientes medidas:

- Reorientar o cambiar la ubicación de la antena receptor.
- Aumentar la separación entre equipo y receptor.
- Conectar el equipo a una toma que esté en un circuito diferente al que está conectado el receptor.
- Consulte a su vendedor o a un Técnico de Radio/TV especializado para obtener ayuda.

Para asegurar el cumplimiento ininterrumpido, todos los cambios o modificaciones no aprobadas expresamente por la parte responsable de la conformidad, podrían invalidar la autoridad del usuario para operar en este equipo. (Ejemplo - utilizar únicamente los cables de interfaz protegidos cuando lo conecte al ordenador o periféricos).

EE.UU. - Este dispositivo cumple con la Parte 15 de la Normativa de la FCC. El funcionamiento está sujeto a las siguientes dos condiciones: (1) este dispositivo no puede causar interferencias perjudiciales y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas interferencias que puedan causar un funcionamiento no deseado.

Descargas Electrostáticas (DEE)

El funcionamiento normal del producto puede verse alterado por DEE. Si se da el